

Continue



Samsung vrt top load washer manual

1 Thank you for purchasing this Samsung product. To receive more complete service or accessory parts, please register your product at or contact www.samsung.com/register 1-800-SAMSUNG (726-7864) 2 The Largest Capacity Even bulky garments and blankets get super clean. The large capacity leaves enough room for a thorough, cleaner wash. 3 To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including reading all instructions before using the appliance and not washing or drying articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents. 4 Plug the power cord into an AC 120V/60Hz/wall socket rated at 15 amps or higher. Do not use an extension cord. 5 Position the appliance so that the power plug is easily accessible. Failing to do so may result in electric shock or fire due to electric leakage. Install your appliance on a level and hard floor that can support its weight. 6 Do not touch the power plug with wet hands. This may result in electric shock. Do not turn the appliance off by unplugging the power plug while the washer is in operation. 7 Insert the laundry into the washer completely so that laundry does not get caught in the door. Ensure that the faucet is turned off when the washer is not being used. 8 Do not place any non-laundry objects, such as shoes, food waste, or animals into the washer. This can cause abnormal vibrations that can damage the washer. 9 Do not press the buttons using sharp objects such as pins, knives, fingernails, etc. This may result in electric shock or injury. 10 Read all instructions before using the appliance and follow the recommended installation procedure to ensure proper function and safety. Unpack your Samsung Washer and inspect it for shipping damage. Ensure all items are included. Contact 1-800-SAMSUNG (1-800-726-7864) if damaged or missing parts. Before installation, follow safety guidelines: wear protective gloves when lifting or carrying the unit to prevent personal injury or strain. Installation requirements: * Electrical: 120 Volt, 60 Hz, and 15 AMP fuse or circuit breaker. Use individual branch circuit serving only your Washer. * Grounding: electrical grounding is required for this appliance. * Drain facility: recommended standpipe height is 39 in (99 cm). * Flooring: install on a solidly constructed floor for best performance. Required dimensions: * Height: 44.6 in (113.5 cm) * Width: 38.4 in (97.6 cm) * Depth: 28.6 in Step 1: Selecting a Location Before installation, ensure the location is suitable and hire a professional if necessary. 2. Check inlet hoses for proper connection and attach each rubber washer. Operating instructions: * Loading your Washer: fill tub with dry clothes but do not overload (max 3/4 full). Overloading may reduce efficiency and cause wear. * Overview of Control Panel: provides instructions, diagnostics, and cycle options. Press buttons to select different cycles. * Child Lock: prevents children from playing with the washer. Activate by pressing Spin and Soil Level buttons simultaneously for approximately 3 seconds. Note: This is a paraphrased version of the provided text. 1. Press and hold the Spin button for 2 seconds to display the spin time on the display panel, then press it repeatedly until the desired spin level (High, Medium, etc.) is selected. **Garment Care and Laundry Instructions** To extend the life of your garments and prevent laundry problems, follow the care label instructions on each item. The labels provide symbols indicating washing, bleaching, drying, ironing, or dry cleaning methods. **Laundry Cycle Chart** Use this chart to select the best cycle and options for your laundry: | Cycle | Description | | --- | | Normal | Everyday wash | | Heavy Duty | Tough stains and heavy fabrics | | Perm Press | Permanent press cycle | | Sanitize | Sanitizes clothes and bedding | | Quick Wash | Fast wash for lightly soiled items | | Delicates/Hand Wash | Gentle cycle for delicate or hand-wash items | | Active Wear | Cycle for activewear and athletic wear | **Environmental Considerations** * Your washer is made from recyclable materials. Dispose of it in accordance with local regulations. * Cut off the power cord to prevent accidental connection. **Warranty Information** SAMSUNG offers a limited warranty on this product, which includes repair, replacement, or refund at our option. However, no person, firm, or corporation can guarantee the performance of this product. **Contact Information** For questions or comments, please contact: * Phone: 1-800-SAMSUNG (726-7864) * Website: www.samsung.com **Registration and Support** Register your product on our website to receive a more comprehensive service. **Safety Precautions** * The washing machine must be plugged into a dedicated 120V outlet with a rating of 15 amps or higher. * Do not share the outlet with other appliances or use an extension cord, as this can cause a fire or electrical shock. **Installation Guidelines** * Place the washing machine on a level surface that can support its weight to prevent vibrations and noise. * Make sure the outlet is easily accessible to avoid electrical shocks or fires. **Operating Instructions** * Do not touch the power plug with wet hands, as this can cause personal injuries. * Never unplug the washing machine while it's in operation, as this can cause sparks and electrical shocks or fires. **Clothing Guidelines** * Make sure to completely load the washing machine to prevent clothing from getting stuck in the door. * Do not introduce any objects other than clothing into the washing machine (e.g., shoes, food scraps, animals), as this can cause abnormal vibrations that may damage the machine and put pets at risk. **Additional Safety Reminders** * Keep packaging materials out of reach of children, as they can be hazardous to them. * Check that the water supply valve is properly closed before starting the washing cycle. * Never press buttons with objects attached to prevent accidental start-ups or electrical shocks. **Maintenance and Troubleshooting** * To add color or detergent, do it with the detergent in the designated compartment. * After finishing a load, turn off the water supply by closing the valves to prevent water damage. Leave the door open to allow the inside of the washer to dry. **Pure Cycle Cleaning Program** * This program helps remove mold that can accumulate inside the washer. To run Pure Cycle: 1. Press the Power button. 2. Press the Pure Cycle button. **Troubleshooting Guide** If your washer: * Doesn't turn on * Has no water or not enough water * Has detergent residue in the automatic dispenser after a cycle finishes * Vibrates excessively or makes too much noise * Fills with water at an incorrect temperature * Won't drain or centrifuge properly * Leaves loads too wet at the end of a cycle * Loses water * Produces excessive foam Check this guide for solutions to these common problems. **Error Codes** If you see error codes on your washer, they may help diagnose issues. For codes not listed here, contact Samsung at 1-800-SAMSUNG (1-800-726-7864). **Water Temperature and Cycle Settings** Use the table below to configure the best cycle and options for your washer. **Environmental Help** * This washer is made with recyclable materials. * If you need to dispose of it, follow local regulations for waste disposal. Cut off the power cord before disposing of the washer. no puede conectarse a una fuente de alimentación. Para evitar que los animales y los niños pequeños se queden atrapados dentro del electrodoméstico, quite la puerta. Page 77 Estados Unidos. Para recibir el servicio técnico de la garantía, comuníquese con SAMSUNG al número indicado y solicita que se determinen el problema y los procedimientos para su solución. El servicio técnico de la garantía solo puede ser prestado en centros de servicio autorizados por Samsung. Page 78 Es importante tener en cuenta que, salvo lo establecido en este documento, no existen garantías sobre este producto, ya sea expresas o tácitas. Samsung desconoce todas las garantías que incluyen, aunque sean tácitas, cualquier garantía real de que el producto se encuentra en condiciones aptas para la venta, de defraudación de derechos o de que el producto se adapta a los fines específicos para los cuales se adquiere. Page 79